


Install Instructions for RUS Offroad Camera Relocation Kit

<https://RUSoffroad.com>

NOTE: Pro R installation differs slightly from Turbo R, please see notes

Camera Relocation Kit for Polaris SXS

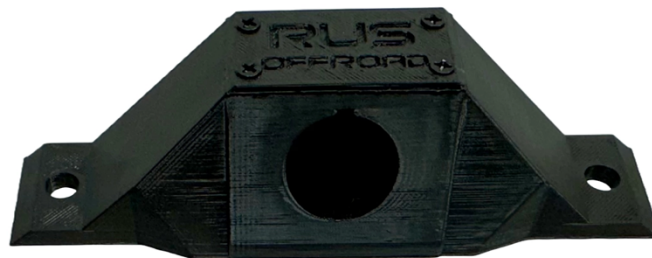


***Camera NOT included**

Works with



Step 1: Remove bed by removing the (4) factory T40 bolts

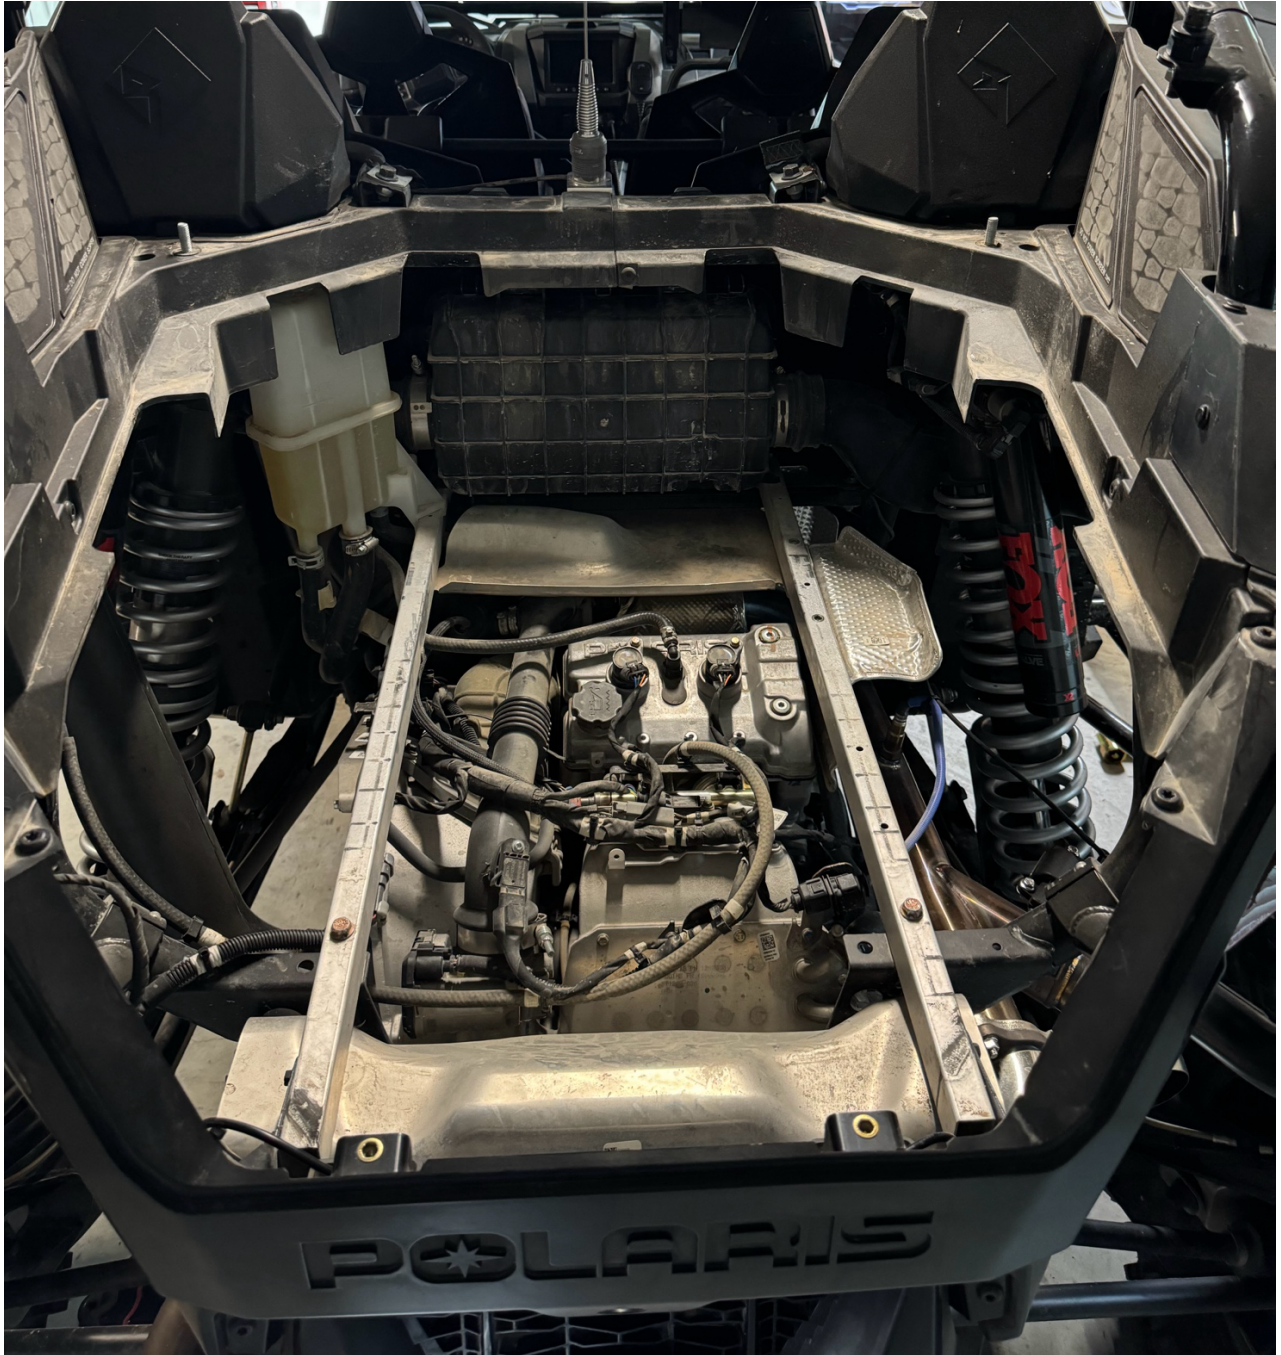


Step 2: Locate the backup camera. Remove and unplug the camera.



Step 3: Using the RUS Offroad Camera Relocation bracket as a template, drill 2 holes using a 5/16 drill bit.

NOTE for PRO R: See image at the bottom of these directions for mounting location. It is different than Turbo R / Pro XP / Pro S

Cut a hole in the middle big enough for the camera wire to pass through. NOTE: You can heat up the area with a heat gun and use a sharp razor blade to cut the middle hole.

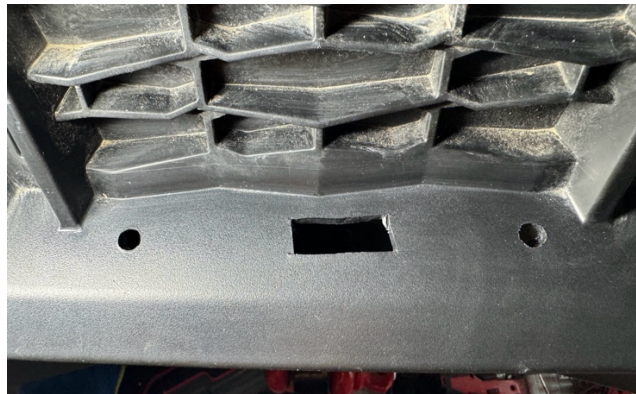

Step 4: Install the factory camera into the RUS Offroad Relocation Mount and install to RZR using the two plastic retainer clips. Be sure to feed the wire through the hole and up to the camera plug before mounting. Install top cover onto camera mount. Plug in camera to factory connection.

NOTE: To prevent wire damage, zip tie excess wire away from the muffler and/or any moving parts.

Pro R Notes:

The exhaust valence on the pro-r must be removed to run the wire

See Mounting Locations On Next Page



TURBO R LOCATION



PRO R LOCATION