

RUS OFFROAD POLARIS XPEDITION PACKOUT / YETI 35 MOUNT

INSTALL INSTRUCTIONS



Pic Shows Yeti 35 Installed

YETI 35 CONFIGURATION



Pic Shows with 4 Packouts

4-PACKOUT CONFIGURATION

This mount can be set up for four Packout boxes or for a YETI 35 cooler with Packout storage. The photos below show the installation process.

STEP 1 ASSEMBLE THE TWO MOUNT HALVES


Lay the two steel mount halves on a flat surface and line them up as shown. Install the supplied joining hardware through the center brackets and tighten the two halves together securely.




Attach the two metal mounts together as shown

STEP 2 INSTALL THE YETI ANCHOR BASES


If you will be using the YETI 35 configuration, install the two black anchor bases in the provided mounting locations. The base installs from underneath the steel plate, with the raised center opening aligned through the hole in the mount. Secure each base with the supplied hardware as shown.

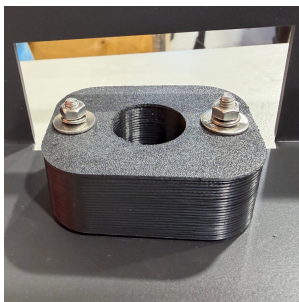

Install the Yeti Anchor Base

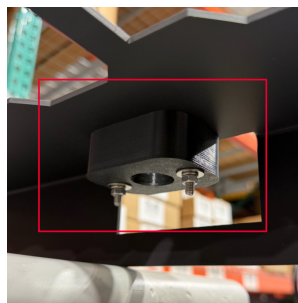

Install the Yeti Anchor Base

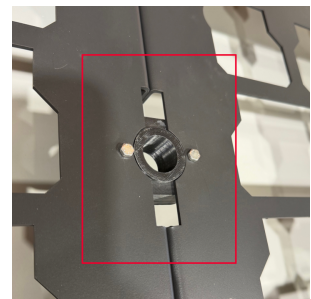

Install the Yeti Anchor Base

NOTE: If you are only using Packout boxes, skip the YETI-specific steps and continue to Step 3.

STEP 3 POSITION THE MOUNT IN THE BED


Place the assembled mount into the Xpedition bed and align it with the factory mounting locations.




**Secure the mount using the 4
factory installed T-40 bolts**

STEP 4 USE THE INCLUDED SPACERS IF NEEDED

If your Xpedition does NOT have the factory bed mat, install the two included spacers between the mount and the bed at the spacer locations. These keep the mount sitting level and flush. If your machine has the factory bed mat, the spacers are not needed.

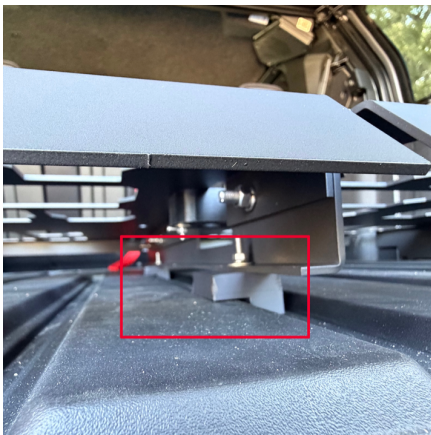

**If your Xpedition does NOT have a factory bed mat, use the 2
spacers included in your kit to ensure the mount sits flush to the bed**

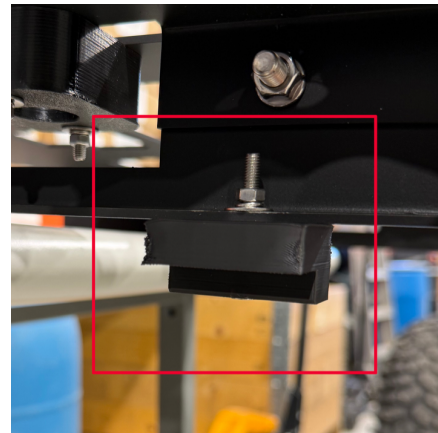

Spacer Installation

STEP 5 SECURE THE MOUNT WITH THE FACTORY T-40 BOLTS

Remove the four factory T-40 bolts at the mounting locations shown. Set the mount in place, line up the mounting holes, and reinstall the factory bolts through the mount and back into the bed. There are two mounting points toward the tailgate and two toward the cab. Tighten all four bolts securely.



This mount uses the 2 factory T-40 bolts already installed on the bed. Remove and reinstall to hold the rear of the mount to the bed.




This mount uses the 2 factory T-40 bolts already installed on the bed. Remove and reinstall to hold the front of the mount to the bed.

NOTE: The mount reuses the factory-installed T-40 bed bolts. No drilling is required.

STEP 6 INSTALL THE YETI ANCHOR BOLTS


For the YETI 35 configuration, insert the blue end of each anchor bolt into the center opening of the black anchor base installed earlier. Make sure the anchor is fully seated before attaching the cooler hooks.

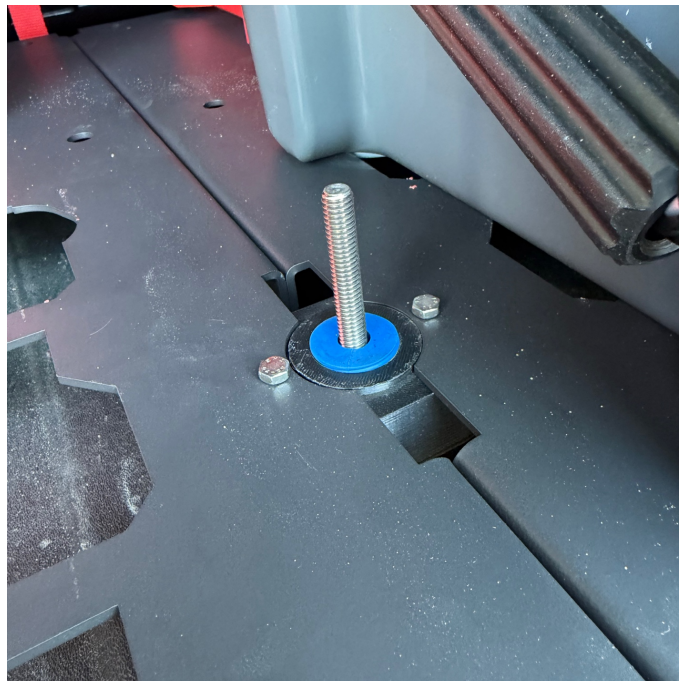

**Attaching the Yeti Hooks:
Insert the blue part of the anchor base
into the plastic hole installed on the mount**

STEP 7 ATTACH THE YETI 35 HOOKS

Place the YETI 35 on the mount. Insert each metal hook into the cooler slot, then position the hook over the threaded anchor bolt. Install the washer and hand knob, then tighten the knob by hand until the cooler is held securely. Repeat on the opposite side.

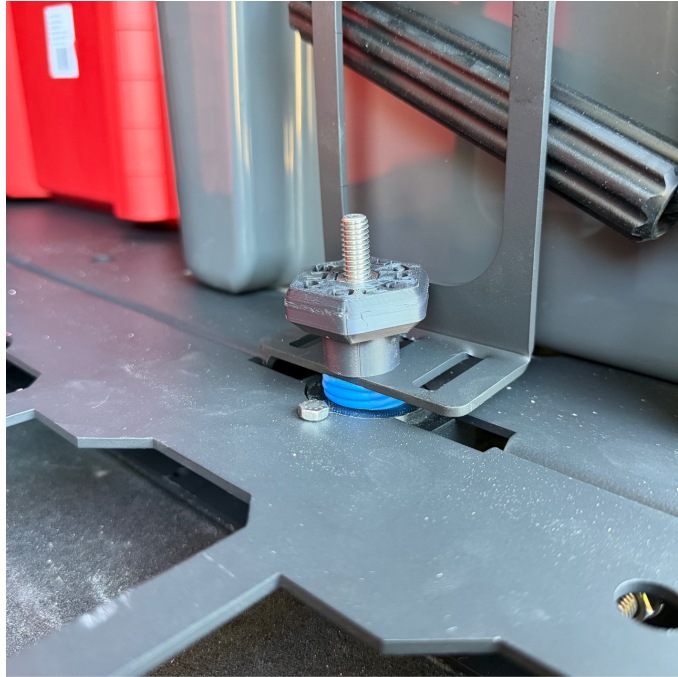

Attaching the Yeti Hooks:
Insert the Yeti hook into the cooler slot, then place the hook into the anchor bolt. Secure with washer and knob.

FINAL CHECK

Before driving, make sure the mount is seated flat, all four factory mounting bolts are secure, and any YETI hold-down hardware is fully engaged. Check the hardware periodically, especially after your first ride or after rough off-road use.

Questions? Visit RUSoffroad.com